



Rotate this flipper
bat to correct
position.

Loosen this nut.