



Iron Maiden ball launch adjustment. If ball is hitting the upper flipper the ball guide should be adjusted down. If ball is hitting the post then the ball guide needs to be adjusted upwards.




## Step 1

Remove nut attaching ramp to slingshot




## Step 2

Remove screw attaching ramp to post

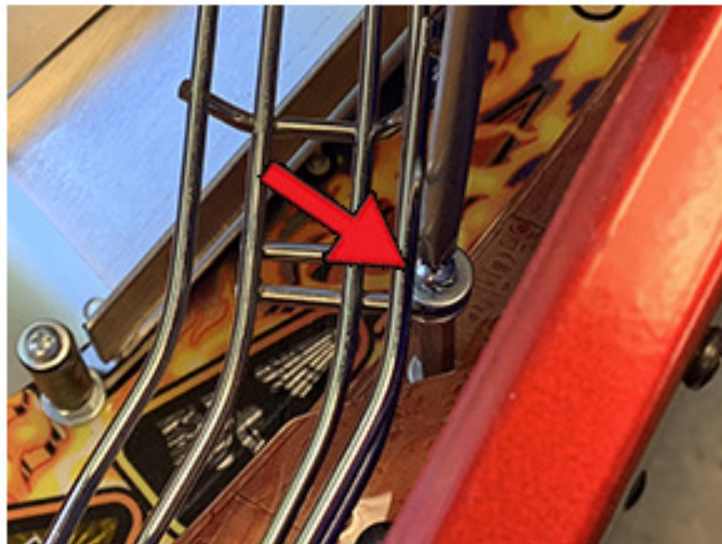


**Step 3**  
**Pull wire ramp out of ledge and set aside**

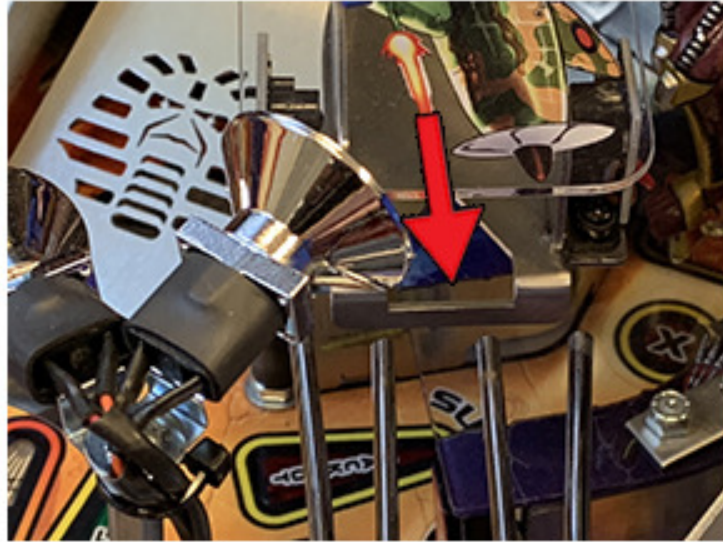

**Step 4**  
**Remove post and washer**



**Step 5**  
**Remove nut and lift off plastic**

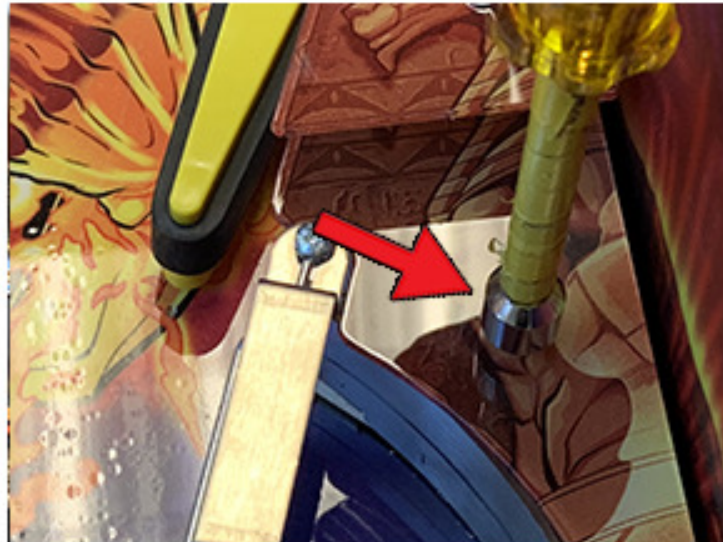

**Step 6**  
**Loosen screw to allow up/down adjustment to shooter lane ball guide. Re-tighten at desired adjustment.**

