


REMOVE THE 4 SPEAKER SCREWS, AND USE PLASTIC MOUNT TO HOLD RGB STRIPS IN PLACE.

BACK OF SPEAKER




FRONT OF SPEAKER


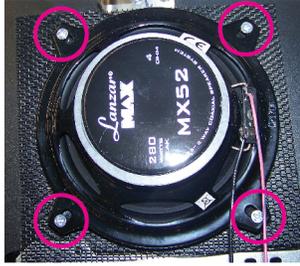


CAN RE-USE SPEAKER MESH IF YOU WISH. MOVE BEHIND PLASTIC SPACER / IN FRONT OF SPEAKER.

MAKE SURE WIRES RUN THROUGH SLOT IN EDGE OF PLASTIC. PUT 1" SCREWS (INCLUDED) THROUGH SPEAKER AND SPACER.

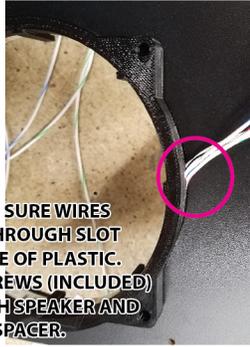

PULL THE 2 PLUGS LOCATED AT THE BOTTOM RIGHT IN BACKBOX.

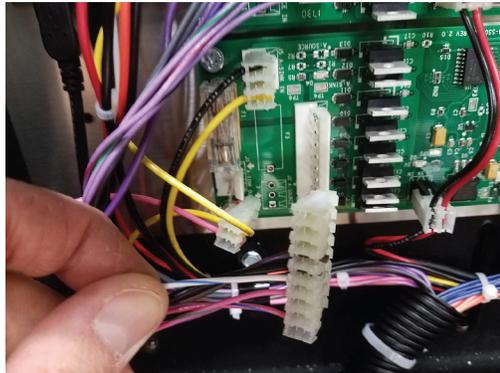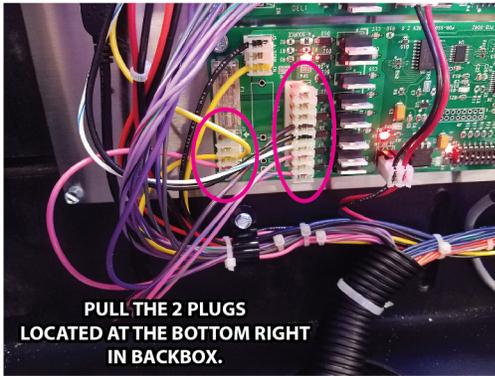


INSTALL ADAPTER AS SHOWN.



PUT EXISTING PLUG ON LOWER PINS, AND RGB PLUG ON TOP 3 PINS.



INSTALL SMALL ADAPTER AS SHOWN, PUT EXISTING POWER WIRES AND RGB POWER ON THE EXTRA PINS.

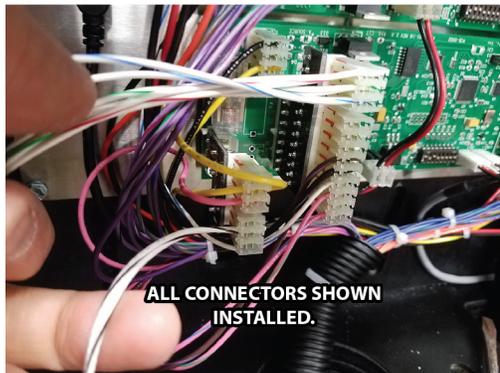

ALL CONNECTORS SHOWN INSTALLED.



USE EXISTING SCREWS TO MOUNT GRILLS... DONE!