


LOCK RELAY

IS ENERGIZED BY 5¢ RELAY, COIN RELAY, LEFT FLIPPER SWITCH OR SCORE MOTOR CAM SWITCH 1C.

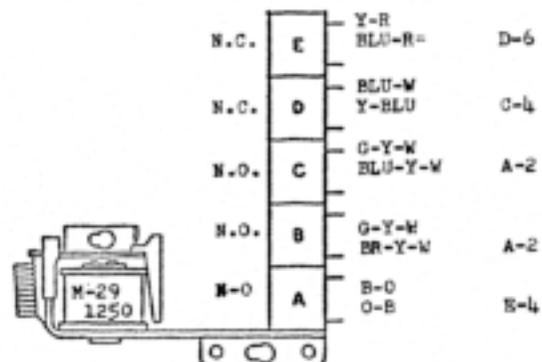

ENERGIZES GAME-OVER RELAY (TRIP COIL).

IN CIRCUIT TO RESET RELAY.


6 VOLTS FROM TRANSFORMER TO LITES.

6 VOLTS FROM TRANSFORMER TO LITES.

IN HOLD CIRCUIT TO THIS RELAY, THRU CABINET BOTTOM KICK-OFF SWITCH.

BALL INDEX RELAY

IS ENERGIZED BY 100 POINT RELAY OR 1,000 POINT RELAY---ALSO BY OUTHOLE RELAY, THRU GAME-OVER RELAY.

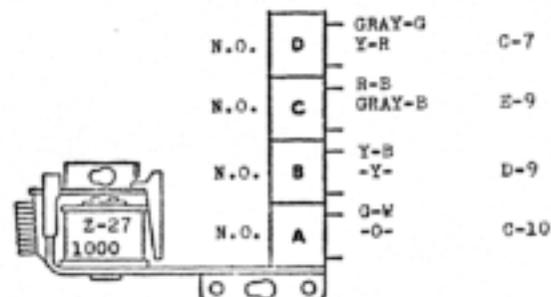

IN CIRCUIT TO BALL COUNT RESET COIL AND GAME-OVER RELAY TRIP AND LATCH COILS.


IN SERIES WITH SWITCH B ON OUTHOLE RELAY.

PULSES GAME RELAY (TRIP COIL).

IN HOLD CIRCUIT TO THIS RELAY.

EJECT RELAY

IS ENERGIZED BY EJECT POCKET SWITCHES, THRU SCORE MOTOR INDEX CAM SWITCH F.

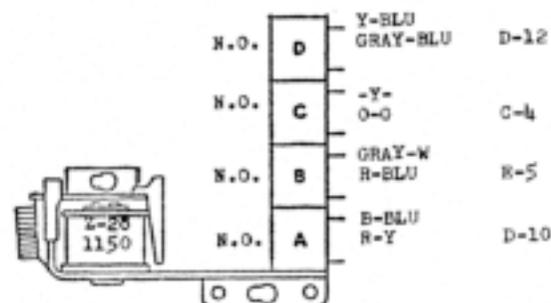

IN SERIES WITH SWITCH C-19 ON 3-IN-LINE RELAY.


RUNS SCORE MOTOR.

PULSES EJECT COILS AT SCORE MOTOR CAM SWITCH 4B.

HOLD CIRCUIT TO THIS RELAY, THRU SCORE MOTOR CAM SWITCH 5A.

RESET RELAY

IS ENERGIZED BY COIN RELAY.

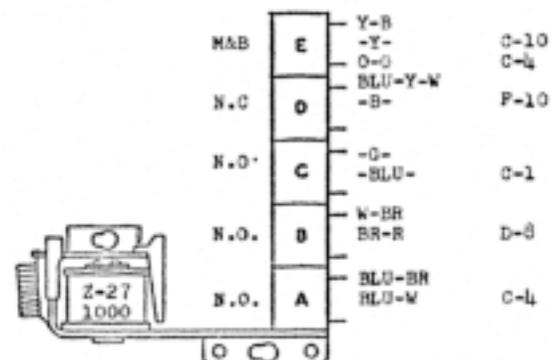

OPENS IN CIRCUIT TO 100,000 RELAY AND CLOSSES TO RUN SCORE MOTOR.

OPENS CIRCUITS TO PLAYFIELD SWITCHES.

ENERGIZES "3-IN-LINE RELAY BANK RESET COIL", THRU SWITCH ON COIN RELAY.

PULSES SCORE RESET RELAY, THRU IMPULSE CAM SWITCH B.

IN HOLD CIRCUIT TO THIS RELAY.