

PLAYBOARD INFORMATION

RUBBER RINGS

A - A-10217	(11) White
B - A-10218	(2) White
C - A-10219	(2) White
D - A-10220	(2) White
E - A-10221	(2) White
F - A-10223	(2) White
G - A-13151	(2) Red
H - A-15705	(18) White (Mini Post Screw)

PARTS LIST

1. 3290 Ball Gate.
2. A-9143 Ball Rebound Rubber.
3. A-8215 Ball Deflector.
4. C-17231 Plastic Shield Set.
5. Blue Pop Bumper A-13905 and A-16838 White Cap Stamped in Red.
6. Red Pop Bumper A-13905 and A-11826 White Cap Stamped in Blue.
7. B-8246 Pop Bumper Platter. (3)
8. C-15707 White Plastic Base Plate with C-15708 Sw. Arm.
9. A-9397 Red Plastic Ball Guide. (2)
10. D-11966 Red Plastic Rollover Insert.
11. D-11968 White Plastic Rollover Button.
12. C-15646 White Plastic Rollover Guide. (3)
13. C-15647 White Plastic Rollover Guide. (2)
14. C-15648 White Plastic Rollover Guide. (2)
15. A-12290 Bulls-Eye White & Green Target. (B-17519 Sw. & Target Assem.) (2)
16. A-12290 Bulls-Eye Yellow & Black Target. (B-17563 Sw. & Target Assem.) (4)
17. B-17175 Spinning Target Stamped Per A-17559 in Blue. (2)
18. A-8514 Ball Guide Rail. - (Wire Form) (1)
19. A-4831 Ball Guide Rail. - (Wire Form) (2)
20. A-4832 Ball Guide Rail. - (Wire Form) (4)
21. A-14571 Ball Guide Rail. - (Wire Form) (1)
22. A-14572 Ball Guide Rail. - (Wire Form) (1)
23. A-13798 Ball Snubber Rail. - (Wire Form) (2)
24. C-7393 Wood Rail. - (Left Side)
25. C-9771 Wood Rail. - (Center)
26. C-13977 Wood Rail. - (Right Side)
27. A-10542 Steel Pins. (4)
28. C-13150 White Flipper. (2)
29. A-15836 Right Kicking Rubber.
30. A-15838 Left Kicking Rubber.
31. D-4806 Top Arch with "F" & "8" - "9" Pos.
32. D-13647-A Card Holder.
33. C-9767 Ball Shooter Gage.
34. A-14792 Mini Post Screw. (18)

C-11561 White Plastic Post
1" High. (33)

LIB. = LIBERAL.
CON. = CONSERVATIVE.

