TALES FROM THE CRYPT

SKILL SHOT: Use door handle to launch ball into guillotine drop targets. Hitting lit target awards skill shot value.

MULTIBALL: Shoot gravestone target to spell CRYPT. Spell CRYPT to lower gravestone. Shoot lowered gravestone or center spinner to start multiball.

JACKPOT: Shoot left ramp during multiball to score jackpot value. Shoot left spinner to increase jackpot value.

DOUBLE JACKPOT: After collecting jackpot, shoot right ramp to score double jackpot value. Shoot right spinner to increase double jackpot value.

MONSTER JACKPOT: After double jackpot, hit gravestone target to spell CRYPT. Spell CRYPT to lower gravestone. Shoot lowered gravestone to score monster jackpot.

CREATURE FEATURE: Shoot center scoop to start lit creature feature on center wheel. Shoot lit spinner to relight center scoop.

DOOR HANDLE: Use door handle during single ball play to lock or unlock the lit creature feature. Shoot lit spinner when creature feature award is unlocked to change lit creature feature award.

DOOR PRIZE: Use left or right flipper to choose mystery door on visual display and use the door handle to open the door for prize.



