



MUSIC SELECT: Push flipper buttons to change songs. Push SMART BUTTON to select song.

SMART BUTTON: Push SMART BUTTON when lit to collect lit shot(s).

TOY BOX MULTIBALL: Shoot the TOY BOX to lite LOCK at right eject. Shoot LOCK when lit to launch balls into the TOY BOX. Lock three balls to start MULTIBALL or use SMART BUTTON to lock a 4th, 5th or 6th ball.

ELEVATOR MULTIBALL: Shoot right and left loop ELEVATOR shots to lite center ELEVATOR shot. Shoot center ELEVATOR to advance to the next floor and ELEVATOR MULTIBALL.

CRANK IT UP: Completing song arrow shot(s) lites CRANK IT UP at the left eject scoop. Shoot CRANK IT UP when lit to enhance playfield feature of current song.

SHOT MULTIPLIERS: Completing the NINE AEROSMITH targets lites the SHOT MULTIPLIERS. Shooting a lit multiplier makes that shot worth 2x for the remainder of the ball in play.

SUPER MODES: Complete a song to start one of seven SUPER MODES. (Targets, Pop Bumpers, Spinner, Loops, Ramps, Lanes and Scoring).



FREE PLAY

