



**TO LEVEL MINI-PLAYFIELD:**

TURN NUT CLOCKWISE TO LOWER RIGHT SIDE.

TURN NUT COUNTER-CLOCKWISE TO RAISE RIGHT SIDE.

**NOTE: LEVEL MAIN PLAYFIELD FIRST!**