HOW TO GO TO HELL WITH ROB ZOMBIE

MODE START: SHOOT LEFT ORBIT AND USE FLIPPERS TO SELECT MODES... DOUBLE TAP OR HIT START TO ENTER. UPPER PLAYFIELD CAN INCREASE JACKPOT BONUS, BUT ALSO COSTS YOU VALUABLE MODE TIME!

DEMONOID PHENOMENON: HIT ALL FLASHING LIGHTS TO MAKE SOLID FOR 2 BALL MULTI, HIT ADD-A-BALL (#3) TO ADD MORE BALLS.

WHAT?: COLLECT FRIED CHICKEN AND GASOLINE ON UPPER PLAYFIELD. BASH SPAULDING 3 TIMES TO START THE MODE. 2 SHOOT PAST SPAULDING AGAIN FOR JACKPOT AND SUPER JACKPOT.

AMERICAN WITCH: STAY OFF SLINGS AND POPS! SHOOT LEFT ORBIT ONCE, RAMP 3 TIMES, AND RIGHT ORBIT FOR 3 BALL MULTI, RIGHT ORBIT AND RAMPS COLLECT JACKPOTS.

RAMP 5 TIMES TO ADVANCE BEAST TO GIRL FOR 3 BALL MULTI. RAMPS COLLECT JACKPOTS. DEAD CITY RADIO: HIT TARGETS #1, #2, #3 FOR 3 BALL MULTI, RAMP COLLECTS JACKPOTS, THEN KEEP HITTING 1, 2, 3

FOR BONUS SURPRISE COLLECTIONS. SHOOT RAMP TO SPELL D-R-A-G-U-L-A. THEN SHOOT RIGHT ORBIT FOR JACKPOT & MULTIBALL, OR

ORBIT FOR VIDEO MODE.

BALLS ARE REACHED. MODE IS BEATEN, CENTER TARGETS INCREASE JACKPOT, RAMP COLLECTS.

SHOOT RIGHT INNER ORBIT TO COLLECT CARDS. GET ALL 3. HIT A JACKPOT IN WHAT? MODE.





HELL BOUND: DO ALL THIS... THEN FIND OUT FOR YOURSELF!