



TO LEVEL MINI-PLAYFIELD:

TURN NUT CLOCKWISE TO LOWER RIGHT SIDE.

TURN NUT COUNTER-CLOCKWISE TO RAISE RIGHT SIDE.

NOTE: LEVEL MAIN PLAYFIELD FIRST!