


# CATAPULT THROW ERROR

Remove the 2 E clips and washers.



Disconnect the coil plunger by pushing the pin inwards.

Next use your left hand to hold up the catapult switch and push off the black catapult arm.

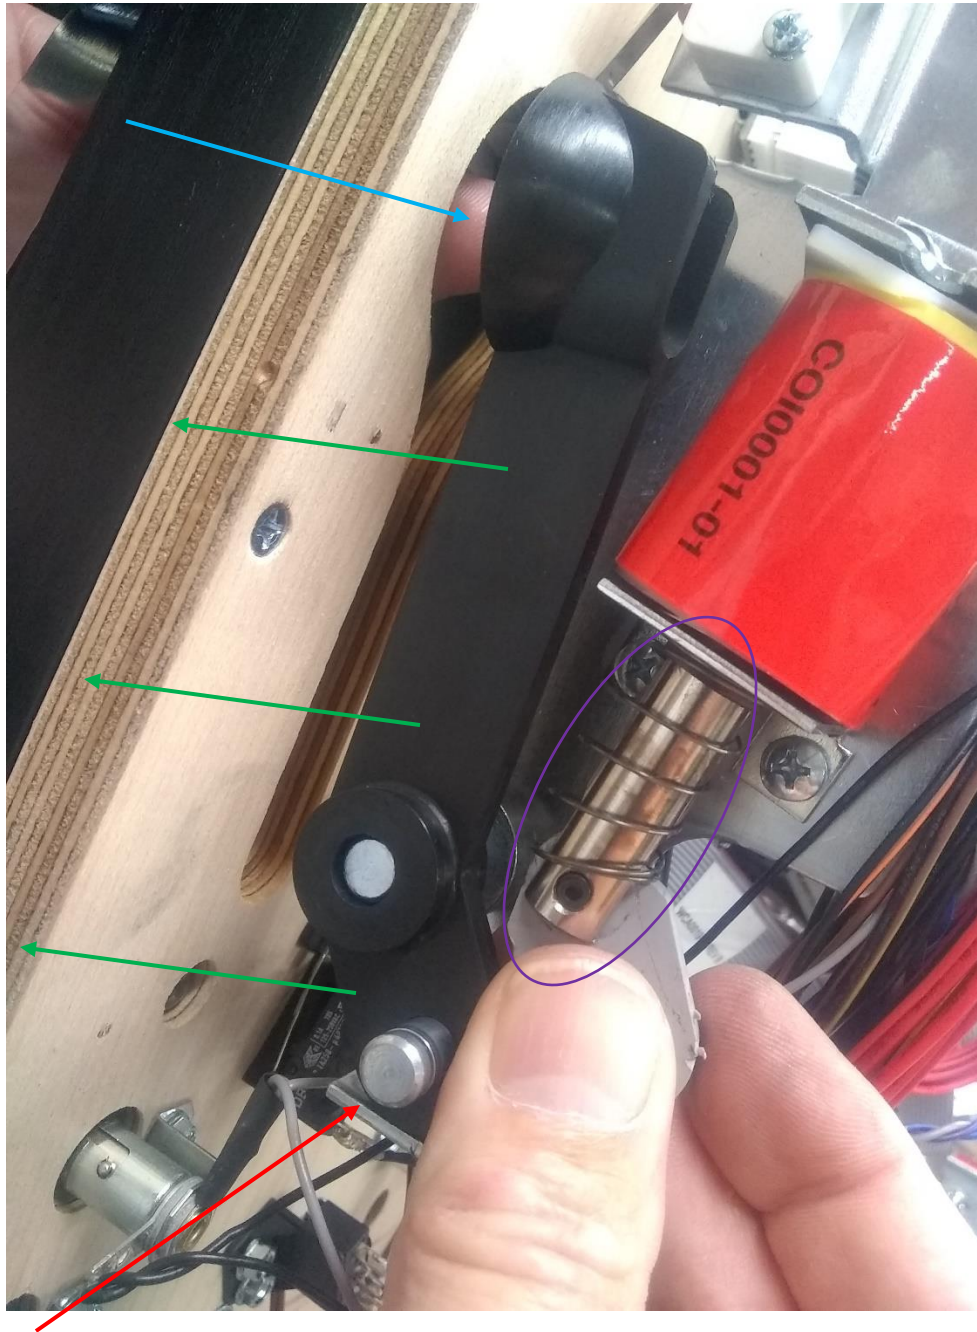

Closeup of removing Catapult Arm.



Clean the inside of the Black Catapult **Fulcrum** as well as the **mounting pin**.  
Reassemble.  
Reset Lower Catapult Coil setting until ball makes it into the Steamer Trunk.

**833.API.HELP**