



Walking Dead Kit Wiring Harness Installation

1. Insert the connectors from kit through the hole located on the right side on top of the Back box.
2. Remove the fluorescent light tube.
3. Install Resistor Bd.(included with kit) to existing PEM studs located on back box and secure with the 4 nuts provided.
4. Install **Blue** Z header to **Blue** connector and **Red** Z header to **Red** connector.
5. Unplug connector **J6** from the I/O board and plug it to the **Blue** connector from the kit.
6. Unplug connector **J7** from the I/O board and plug it to the **Red** connector from the kit.
7. Plug the **Black** connector from the kit to **J7** of the I/O board
8. Plug the **White** connector from the kit to **J6** of the I/O board.
9. Plug the 7 pin connector from the kit to the resistor Bd.
10. Re-dress the wiring harness out of the way of the circuit boards and re-install the fluorescent light tube .

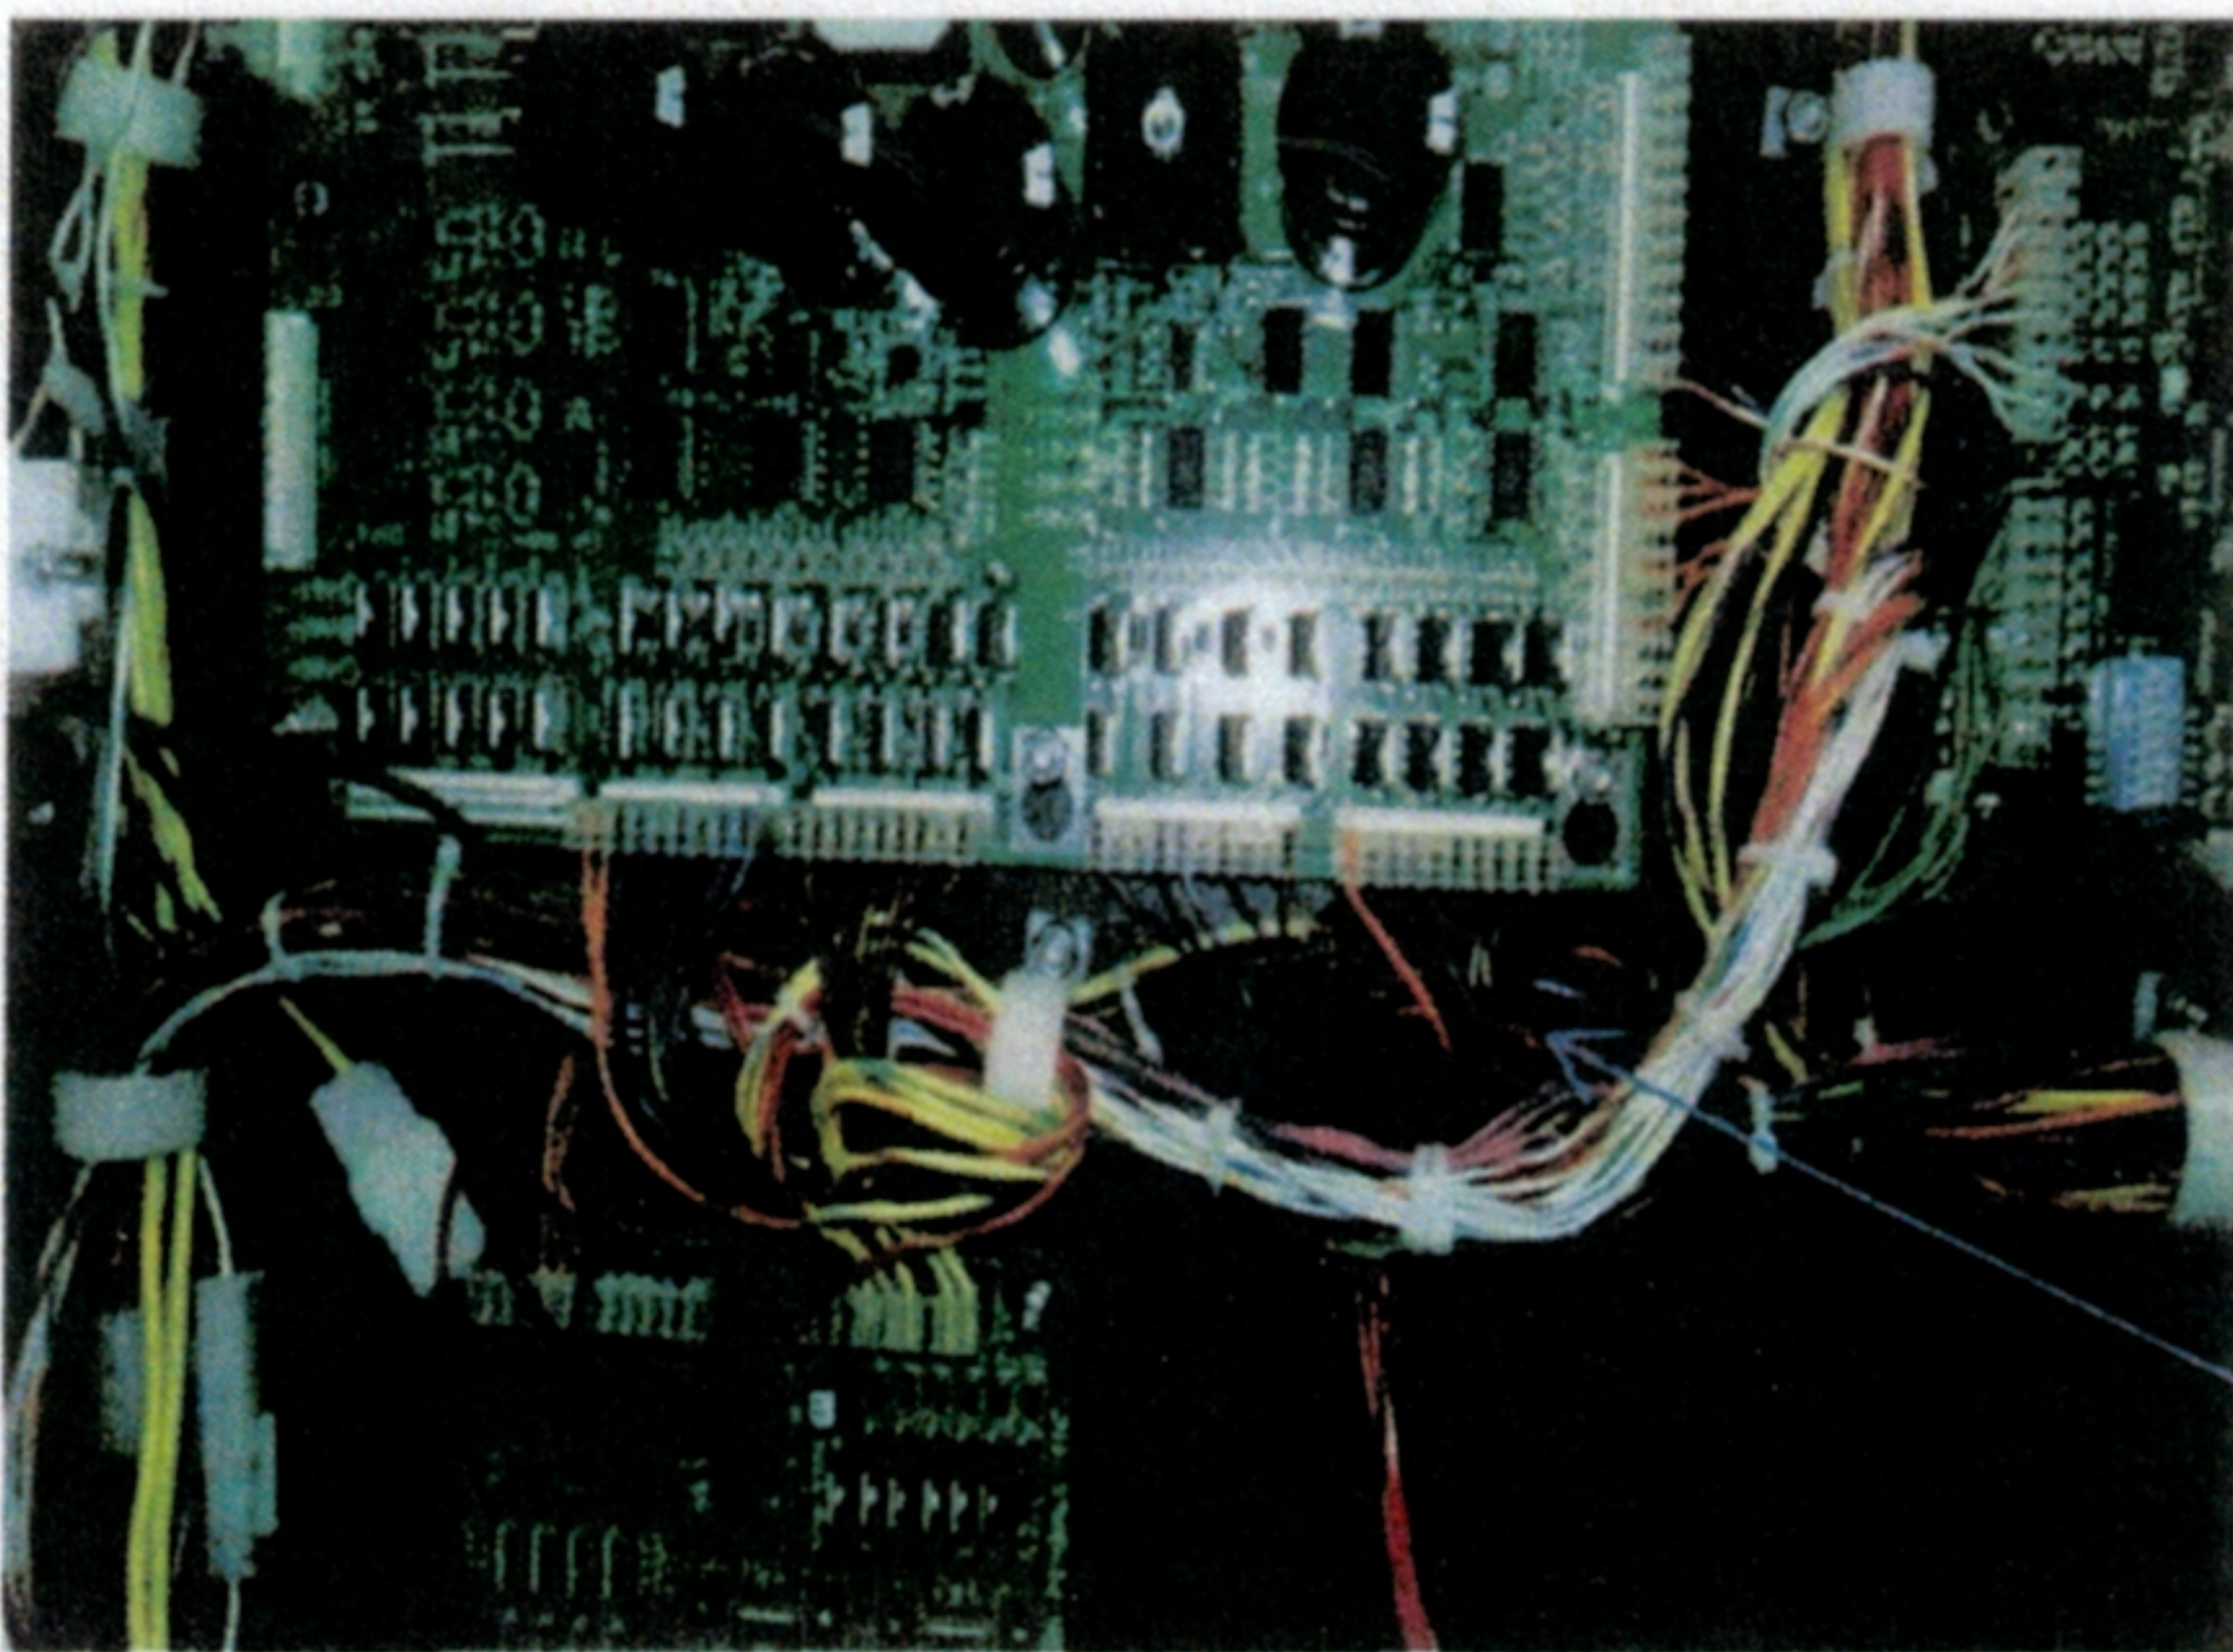

Before

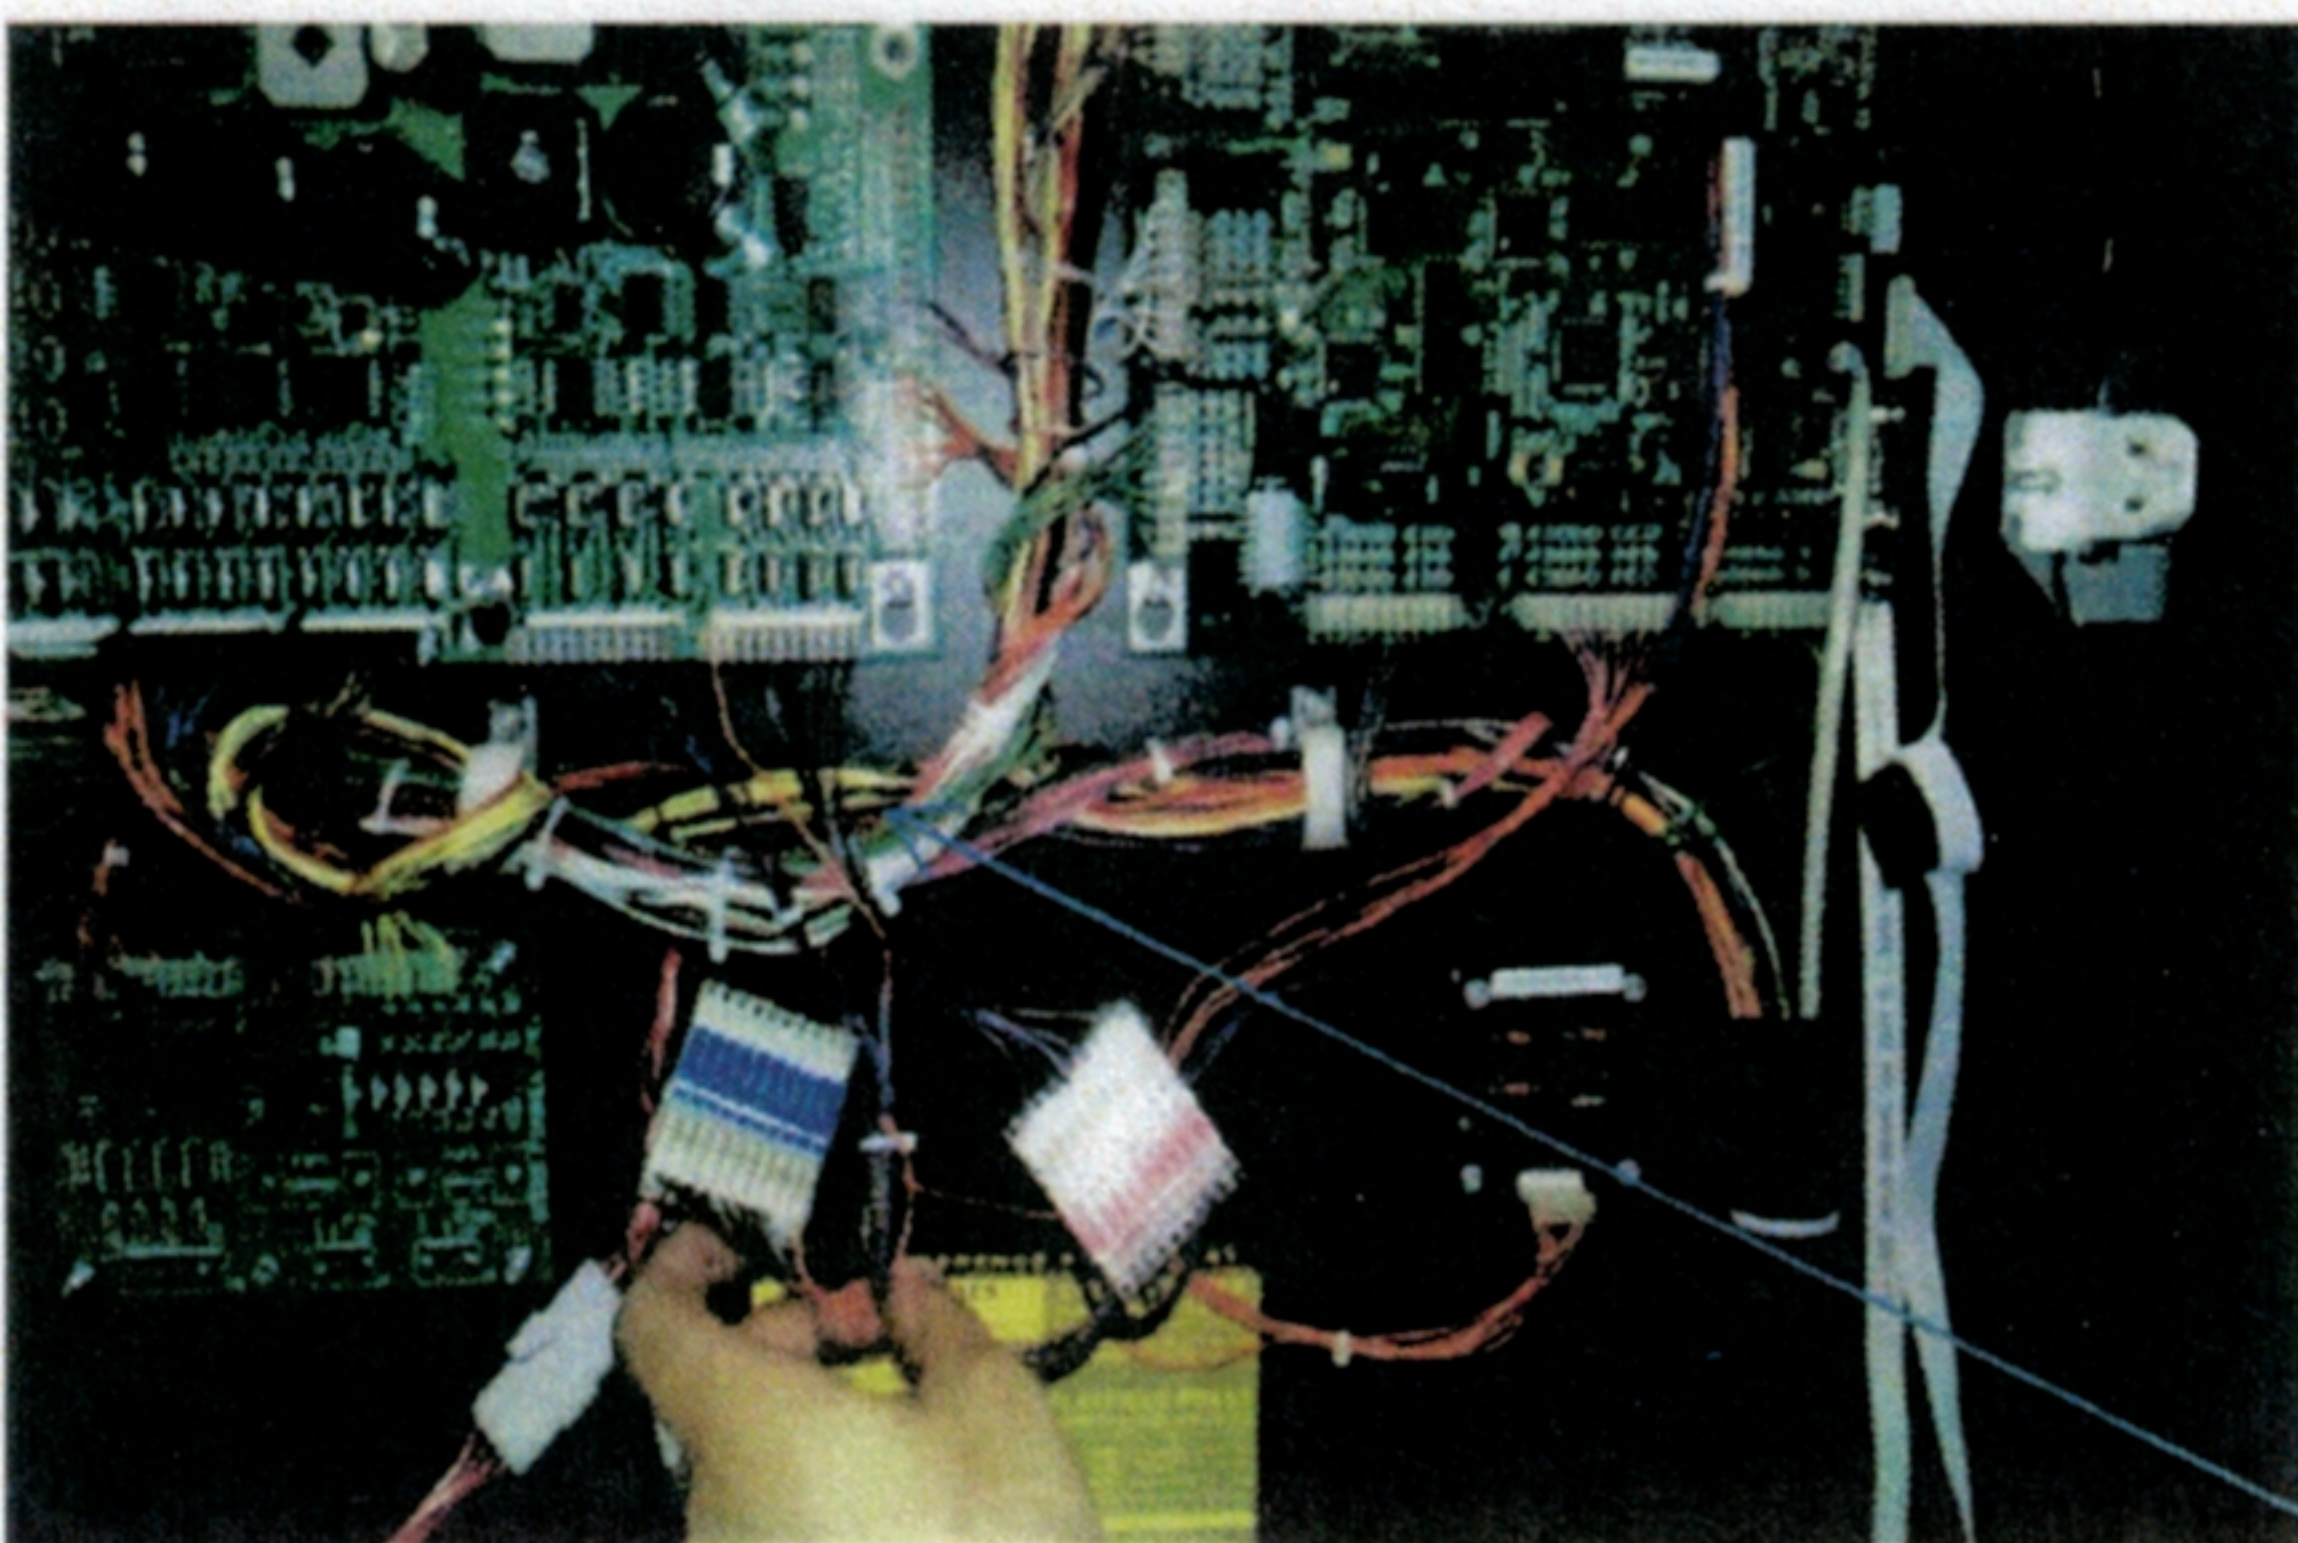

After