



4. Finished front of assembly:

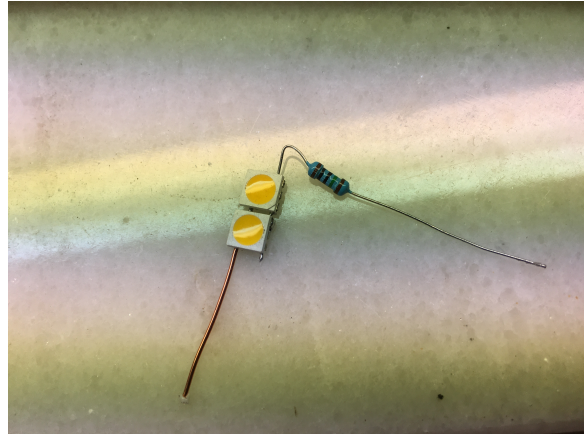

5. Insert resistor through hole and solder. Solder other wire (copper wire in picture) to lamp base, then clip excess wires.

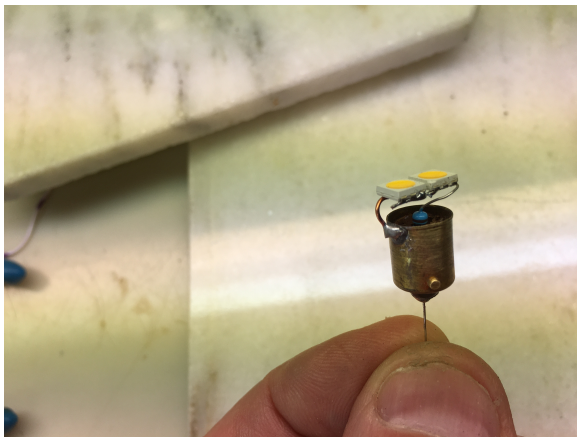

6. Finished before and after hot glue. The hot glue isn't necessary, but adds rigidity.

