


BLACK ROSE: SKULL AND BONES SPEAKER WIRING DETAIL



**AUDIO BOARD
A-12738-20013**

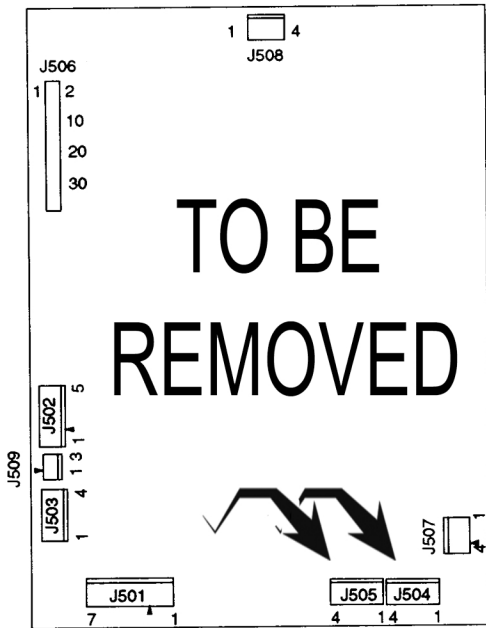

Original design has all speakers in series, back box and base cabinet, and this series loop connected to two different 4-pin connectors, one wire on each of J504 and J505

- | | |
|---------------------------------|--|
| J504-1 Not Used | J505-1 Not Used |
| J504-2 Not Used | J505-2 Black-Yellow, Signal to speaker |
| J504-3 Black, Signal to speaker | J505-3 Not Used |
| J504-4 Not Used | J505-4 Not Used |

Remove the wires from these two 4-pin connectors and split or cut the series jumper between the back box speakers and the cabinet speaker so that you have 4 speaker wires.

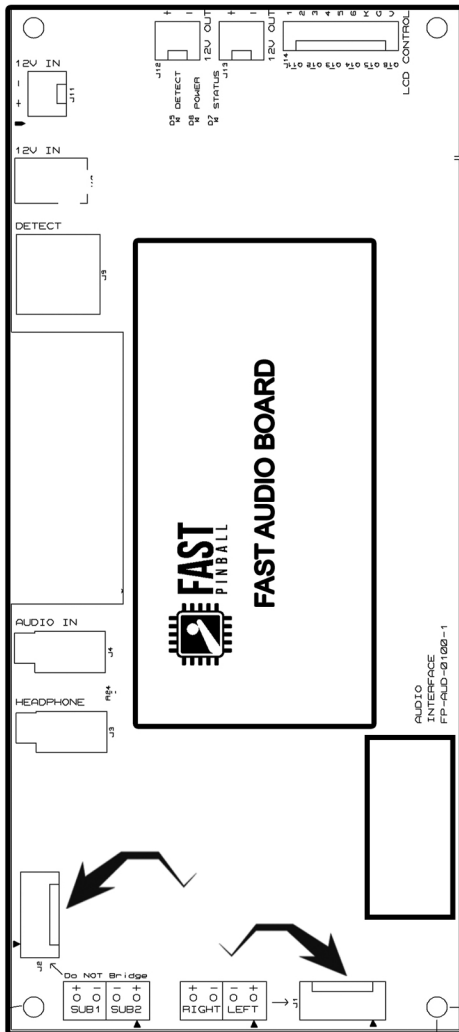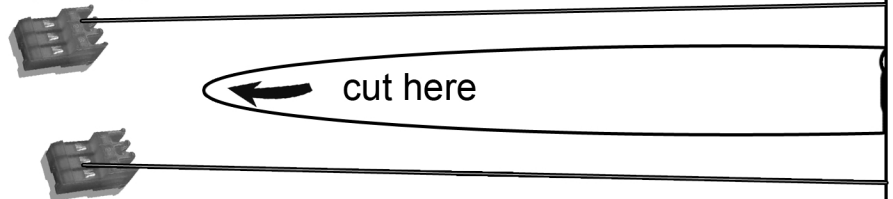

Connect the 4 speaker wires as follows:

Connect the two wires that go to the backbox speakers to pins 1 and 2 of one 4 pin connector and plug that connector to the bottom right speaker connector on the FAST audio board (RIGHT or LEFT).

Connect the two wires that go to the base speaker to pins 1 and 2 of one 4 pin connector and plug that connector to the bottom left speaker connector on the FAST audio board (SUB 1 or SUB2).

You can reuse the 4-pin connectors or use the new ones included in the kit.

Please make sure both sets of speakers observe polarity by having the wire with the stripe connect to the same polarity connection point.

