


Assembly Pictures (the GI version)

1. Start with an old bulb base. Break the glass then drill a small hole through the bottom.



2. Next take a couple SMD's off the reel, pay attention to the notch (see in the upper left corner).

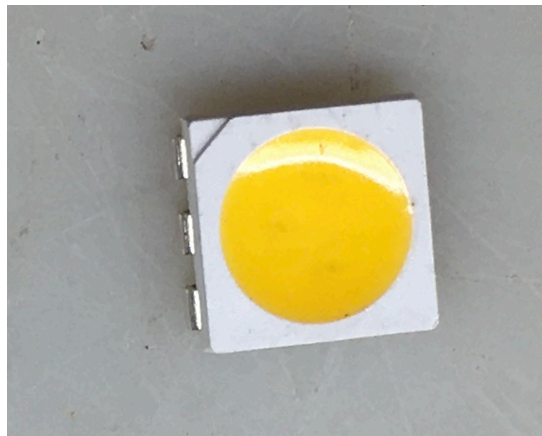

3. Solder a 150 Ω resistor to the SMD's observing polarities (notches). Solder wire to the other side of SMD's. See sketch above for notch locations.

