


## **Ball Shooter Assembly Alignment**

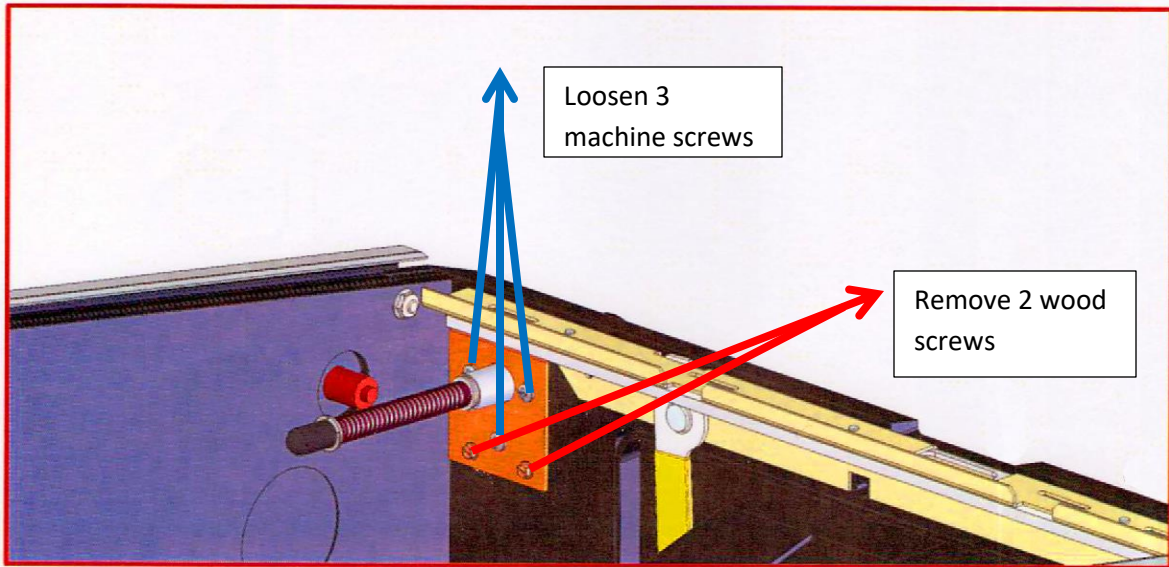

**Plunger assembly shown installed in cabinet.**

- 1. Loosen the 3 machine screws and remove the 2 wood screws.**
- 2. Position the shooter housing so that the plunger Tip is centered with the pinball in the shooter lane.**
- 3. Tighten the 3 machine screws and re-install the 2 wood screws.**