


STEP #1


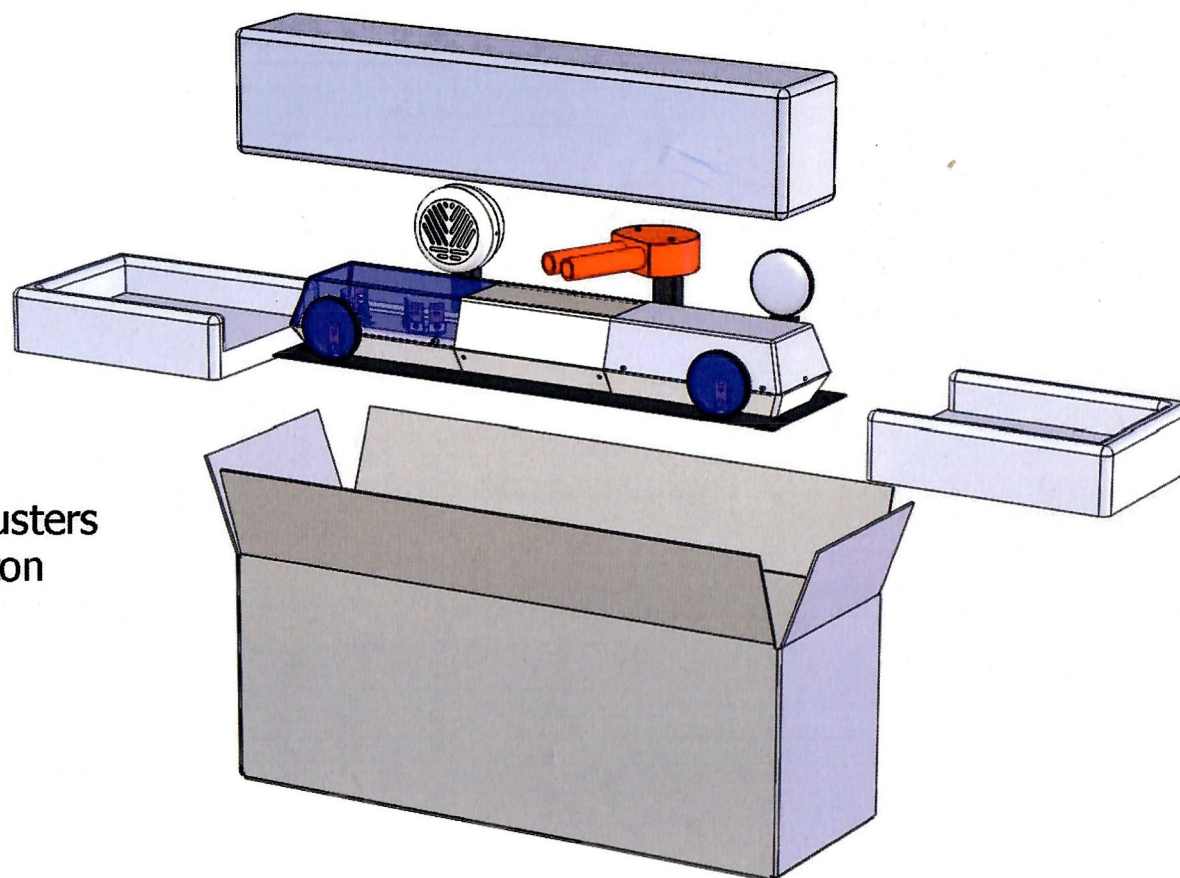


Remove Ghostbusters
topper from carton

755-7603-00

STEP #2

Remove 4 screws and hole plug
from the top of your back box
Save these for later

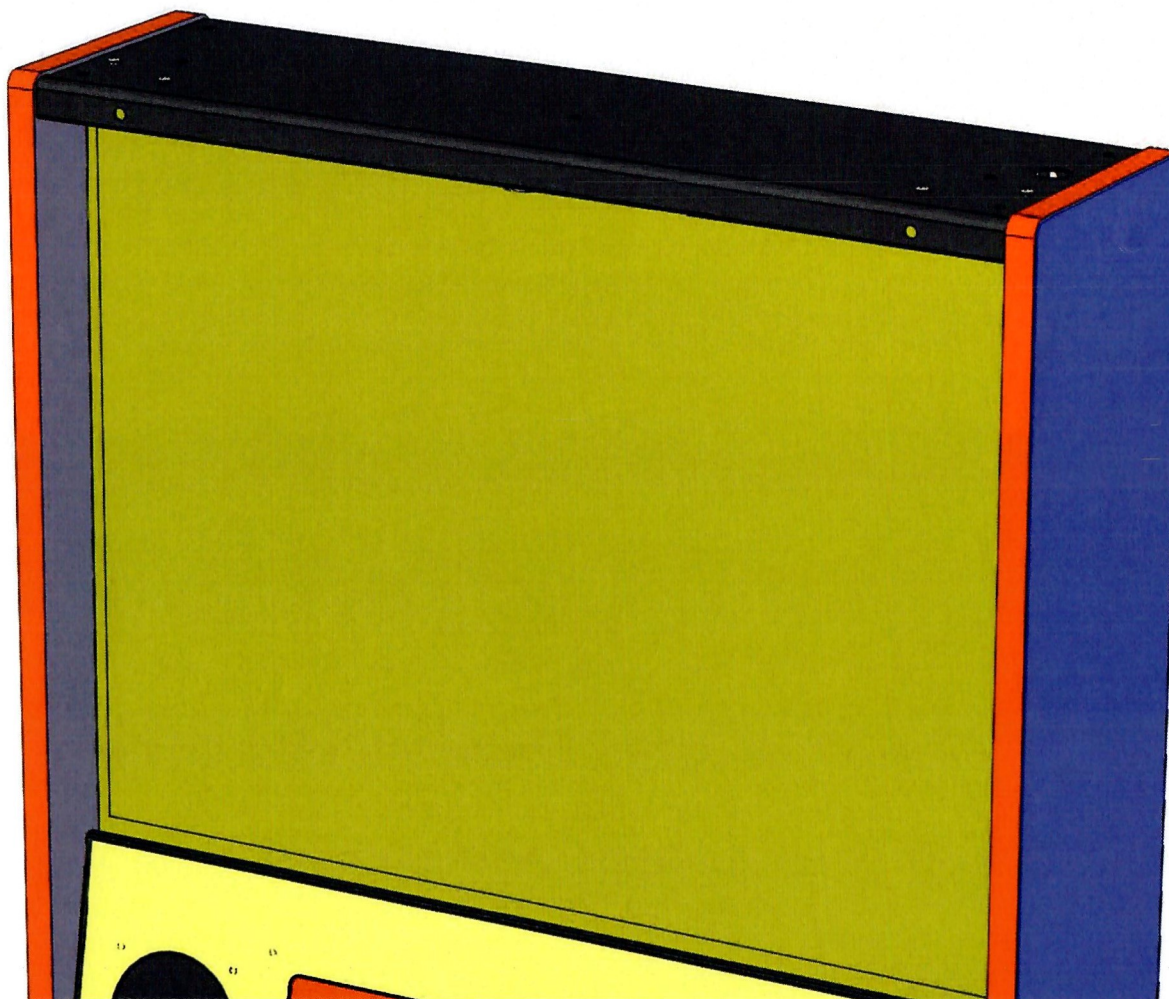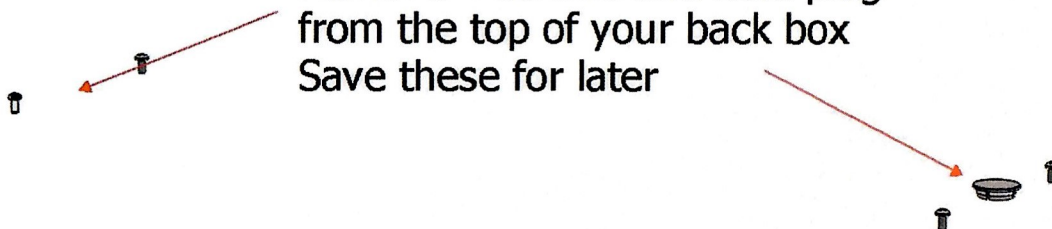

755-7603-00

The logo for Stern pinball, featuring the word "Stern" in a stylized orange font with a black outline, and "pinball" in a smaller, italicized black font below it. A silver pinball is positioned above the "n" in "Stern".

Push the 3 cables through the cable hole on the top of the cabinet.


Store the hole cap in a secure place in case you remove the topper.



755-7603-00

STEP #4

Topper secured to the back box

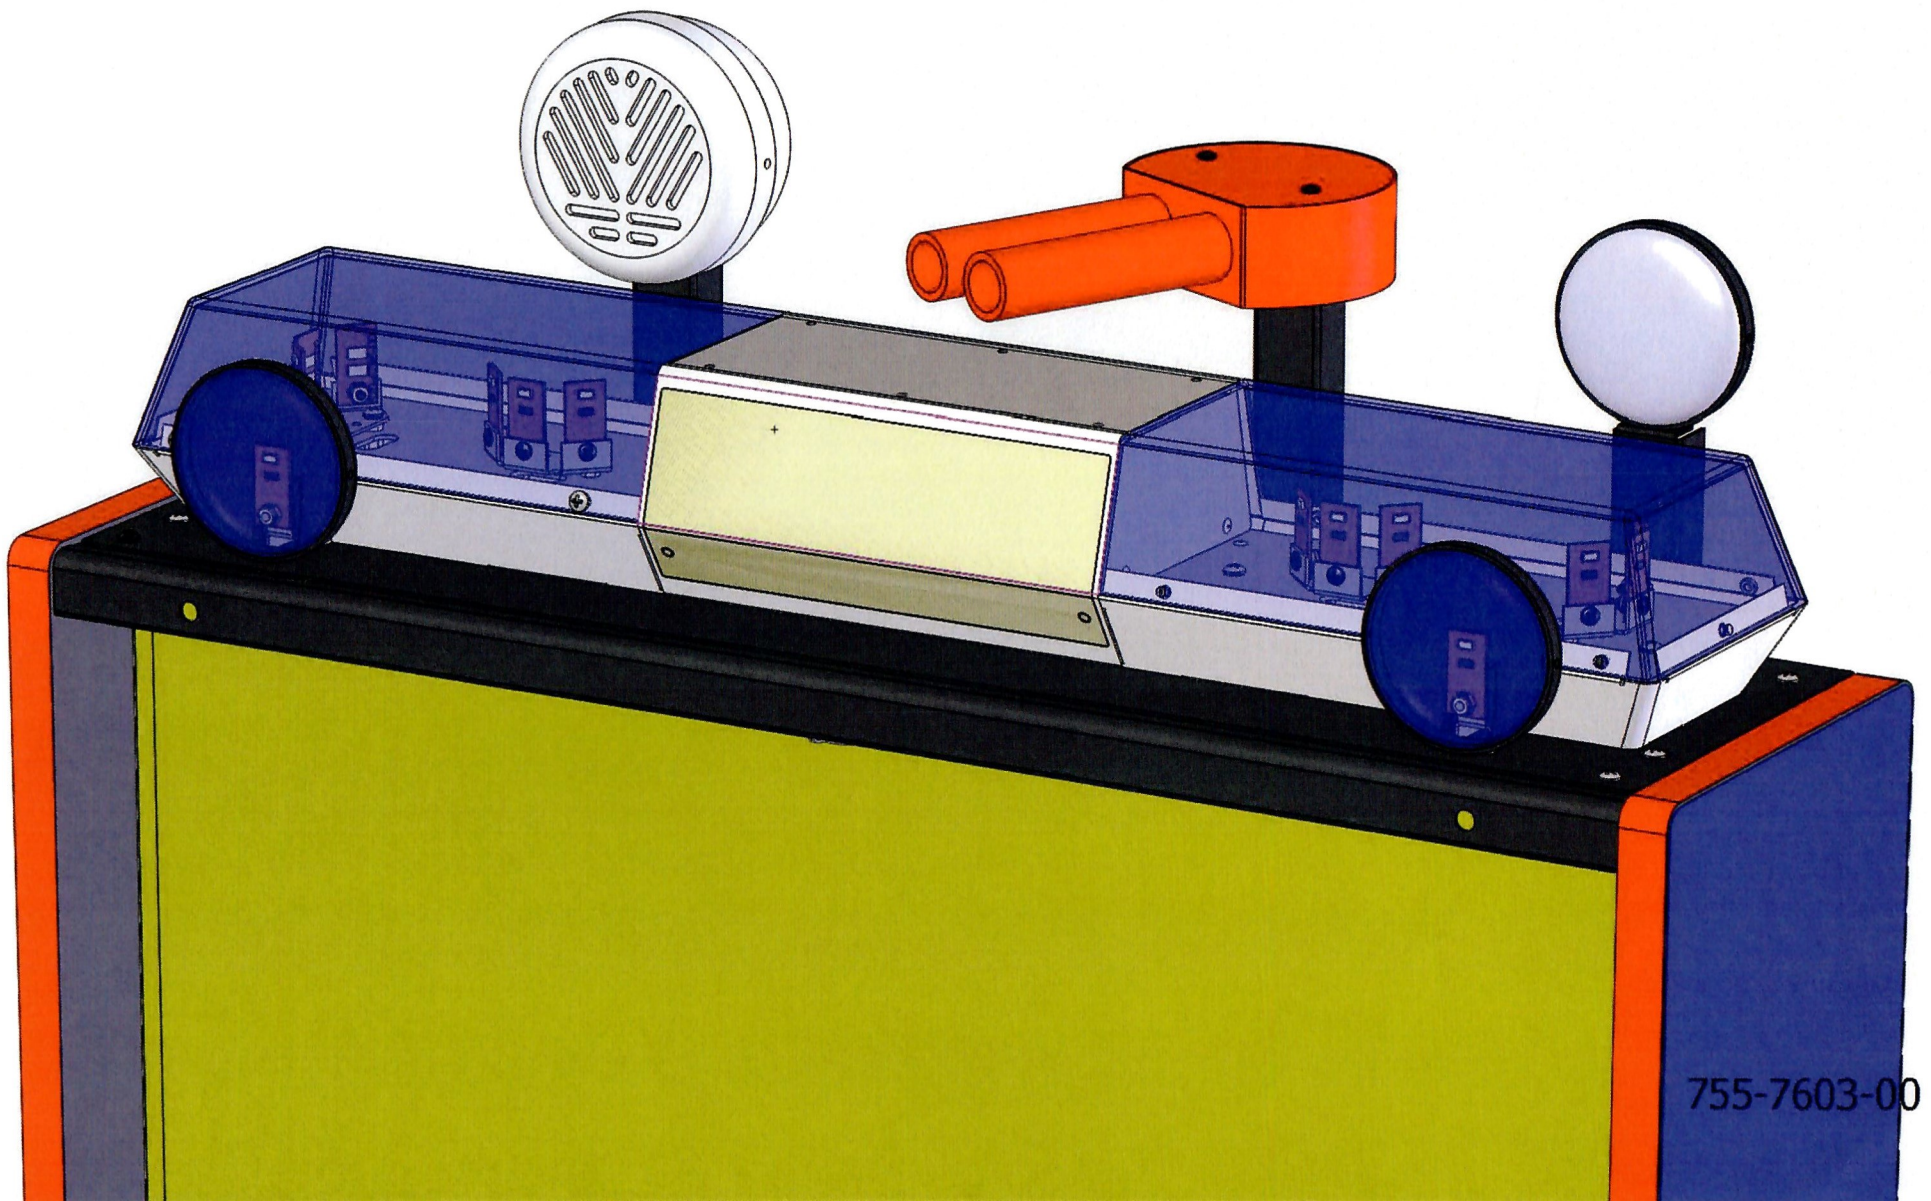







755-7603-00



STEP #5


Ghost Busters Topper Kit Wiring Harness Installation

1. Kit contents; (1) Topper assembly, (1) RJ45 coupler and (1) power extension cable.
2. Drop the cables from the topper through the hole located on the top right side of the back box.
3. Plug the RJ45 coupler into either one of the RJ45 cables coming from the topper. Plug the power extension cable to the power cable coming from the topper as shown.
4. Unplug the RJ45 cable from the CPU CN3 connector (cabinet Node Board connection) and plug it into the RJ45 coupler. Plug the second RJ45 cable coming from the topper into CN3 of the CPU.
5. Plug the other end of the power extension cable to CN7 of the power distribution board.
6. Dress the wiring harness neatly with existing cable clamps.

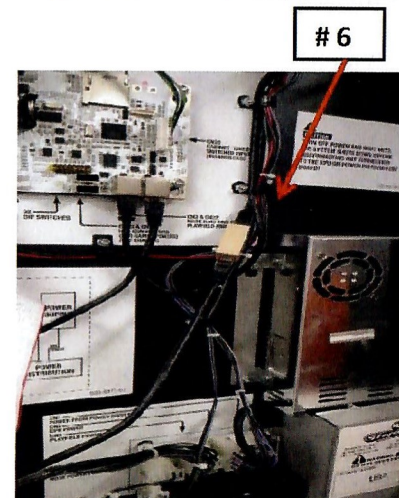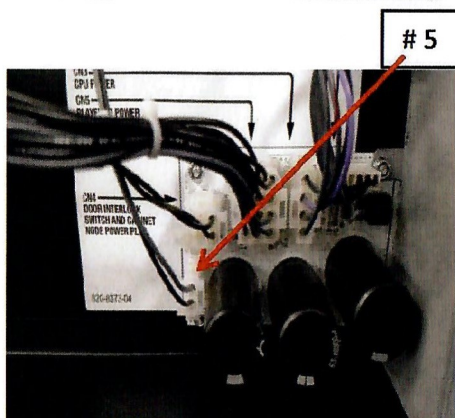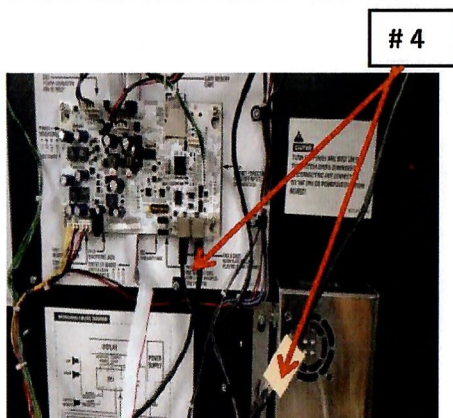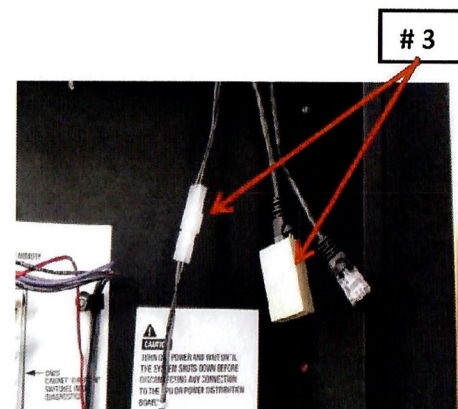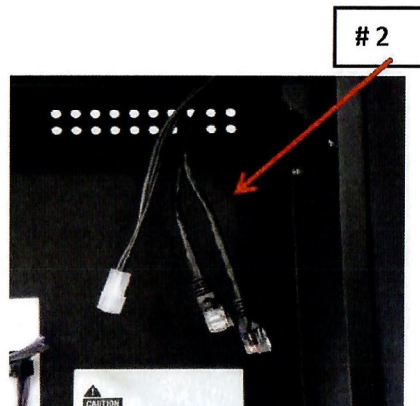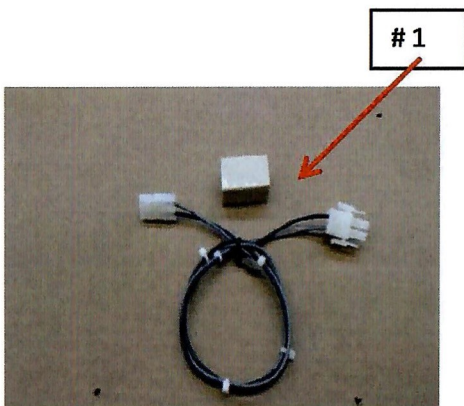

755-7603-00

STEP #6

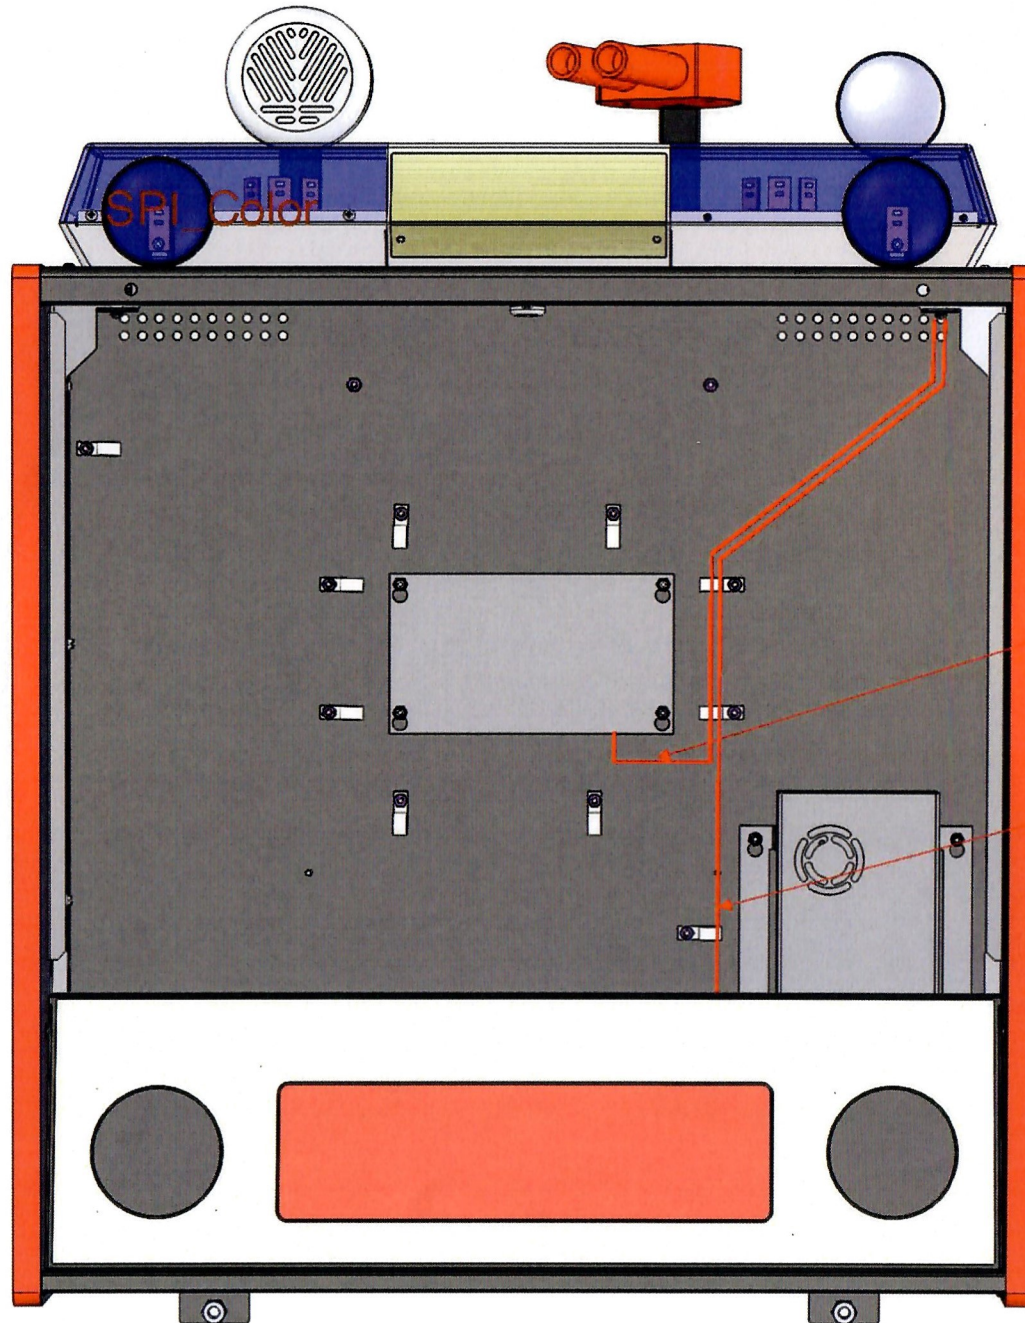

Dress cables as shown

RJ45 cables

Power cable

755-7603-00