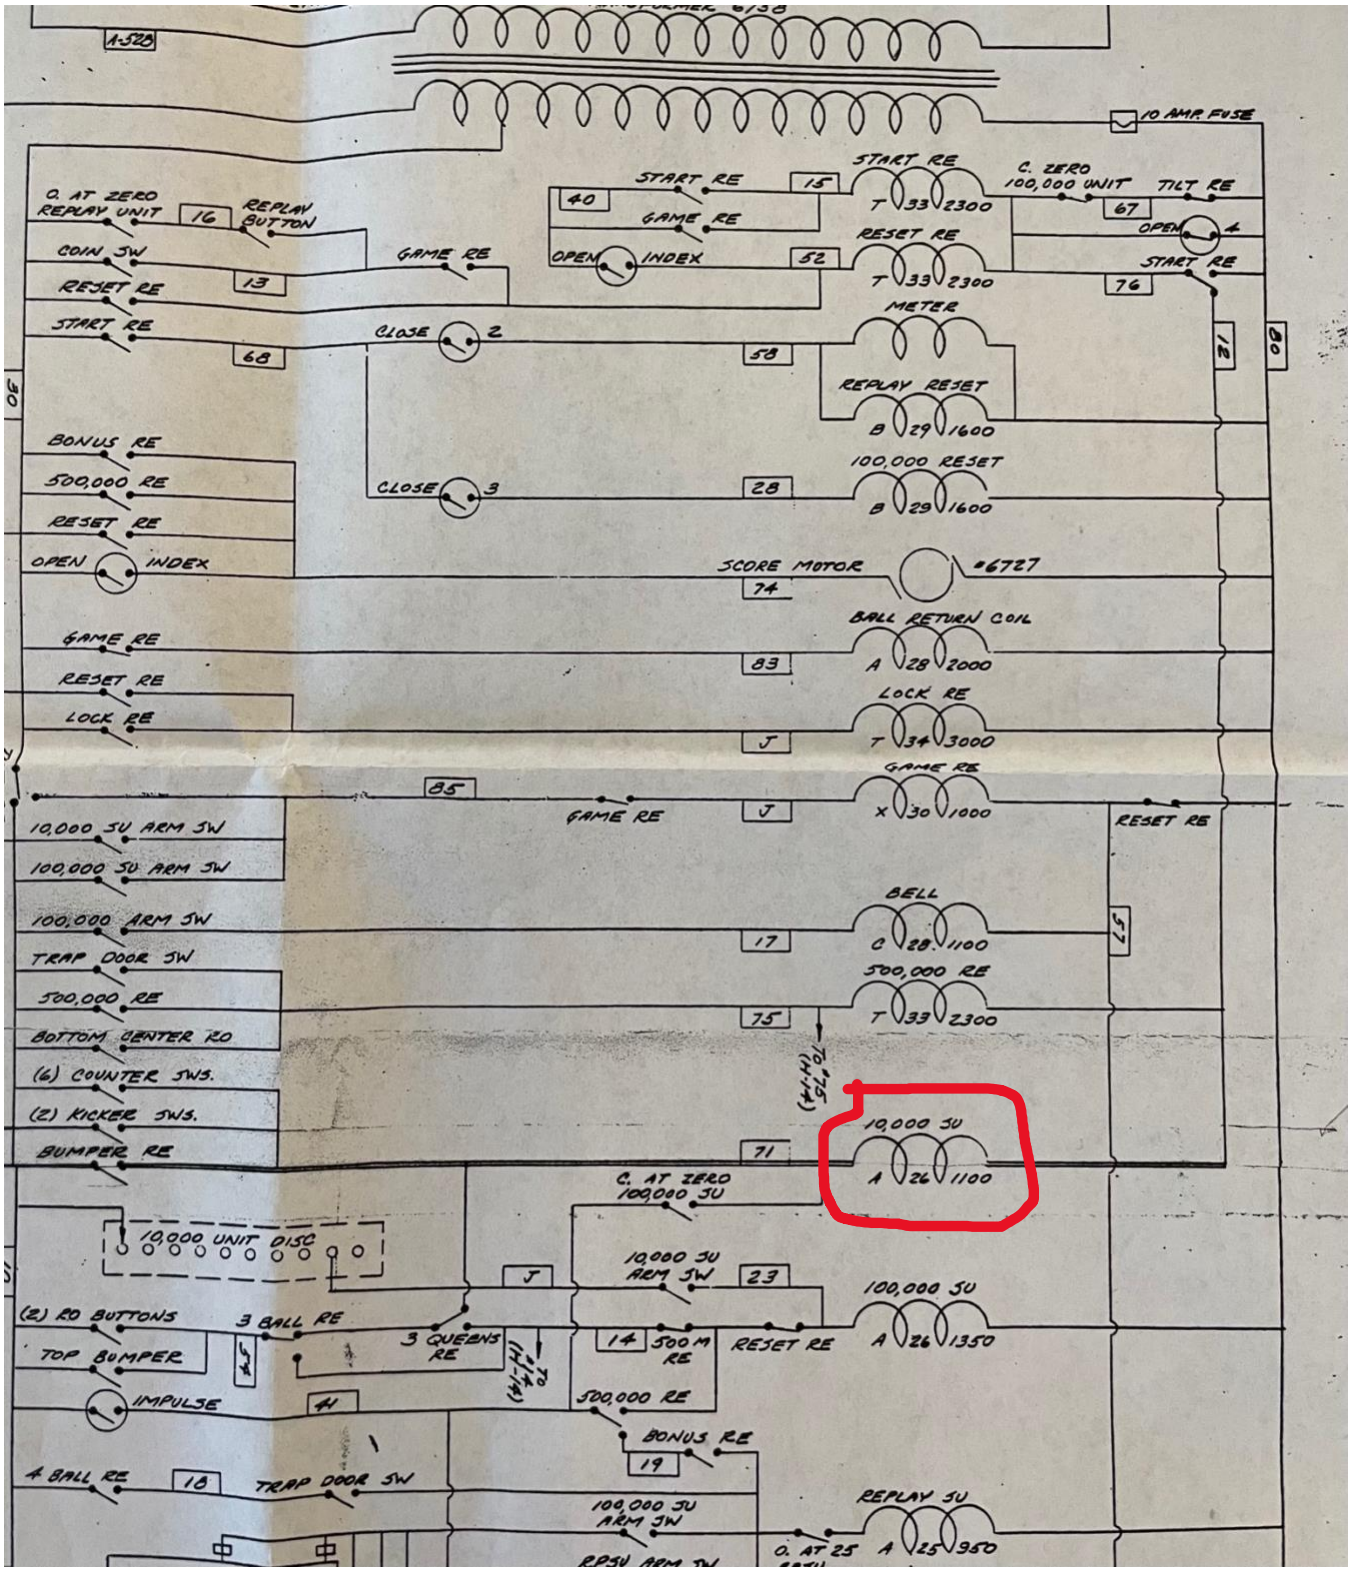
1-520
10 AMP. FUSE
C. AT ZERO REPLAY UNIT
16
REPLAY BUTTON
COIN SW
13
RESET RE
START RE
68
GAME RE
CLOSE
2
START RE
40
15
GAME RE
OPEN
INDEX
52
START RE
T 33 2300
RESET RE
T 33 2300
C. ZERO 100,000 UNIT
67
TILT RE
OPEN
4
START RE
76
METER
58
REPLAY RESET
B 29 1600
12
80
90
BONUS RE
500,000 RE
RESET RE
OPEN
INDEX
CLOSE
3
28
100,000 RESET
B 29 1600
SCORE MOTOR
74
#6727
GAME RE
RESET RE
LOCK RE
83
BALL RETURN COIL
A 28 2000
J
LOCK RE
T 34 3000
85
GAME RE
J
GAME RE
X 30 1000
RESET RE
10,000 SU ARM SW
100,000 SU ARM SW
100,000 ARM SW
TRAP DOOR SW
500,000 RE
BOTTOM CENTER RO
(6) COUNTER SWS.
(2) KICKER SWS.
BUMPER RE
17
BELL
C 28 1100
57
75
500,000 RE
T 33 2300
TO 75 (H-14)
71
10,000 SU
A 26 1100
C. AT ZERO 100,000 SU
10,000 UNIT DISC
J
10,000 SU ARM SW
23
100,000 SU
A 26 1350
(2) RO BUTTONS
3 BALL RE
3 QUEENS RE
TO 71 (H-14)
14
500 M RE
RESET RE
TOP BUMPER
IMPULSE
H
500,000 RE
BONUS RE
19
4 BALL RE
18
TRAP DOOR SW
100,000 SU ARM SW
REPLAY SU
O. AT 25
A 25 950