

## Assembly Instructions - Mini-Playfield Opto

(P/N A-20424)

1. Remove the two (2) SHEET METAL SCREWS (P/N 4106-01013-06) that attach the OPTO TRANSISTOR ASSEMBLY (A-16909), on the left side of the MINI PLAYFIELD ASSEMBLY. (See Fig.1)

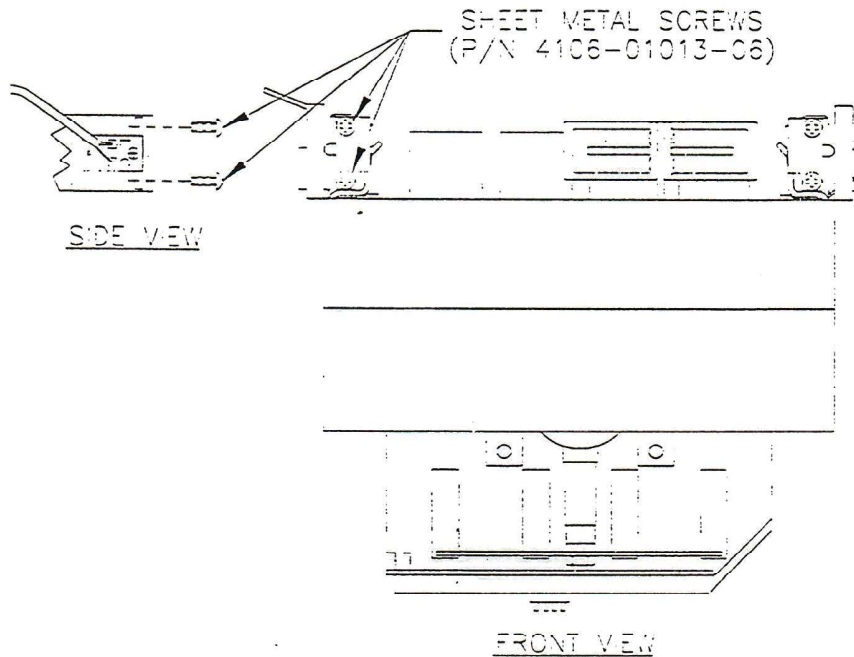


FIGURE 1

2. Reinstall the OPTO TRANSISTOR ASSEMBLY on the EXTENSION BRACKET (P/N 01-14013). The EXTENSION BRACKET can be found in the MINI PLAYFIELD OPTO REPAIR KIT(P/N A-20424) (See Fig.2).

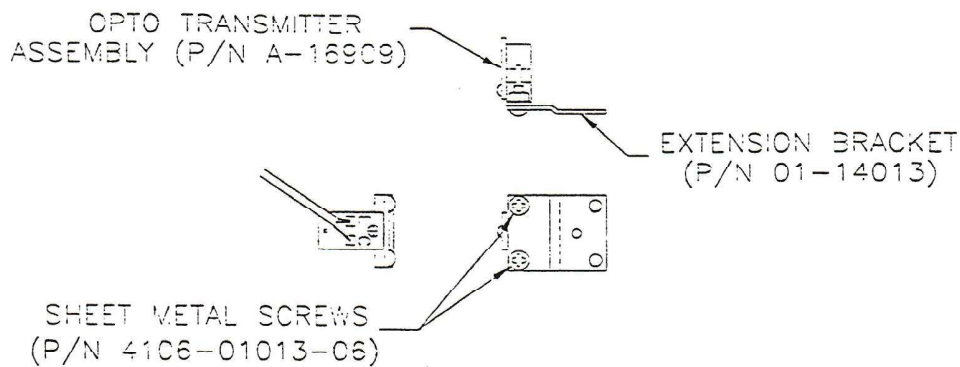


FIGURE 2

When installing the OPTO TRANSISTOR ASSEMBLY, make sure

that the orientation of the EXTENSION BRACKET is as shown in Figure 2.

3. Now mount the EXTENSION BRACKET/OPTO TRANSISTOR ASSEMBLY back onto the MINI PLAYFIELD ASSEMBLY using the two (2) SHEET METAL SCREWS (P/N 4108-01004-06) supplied with the REPAIR KIT. (See Fig.3)

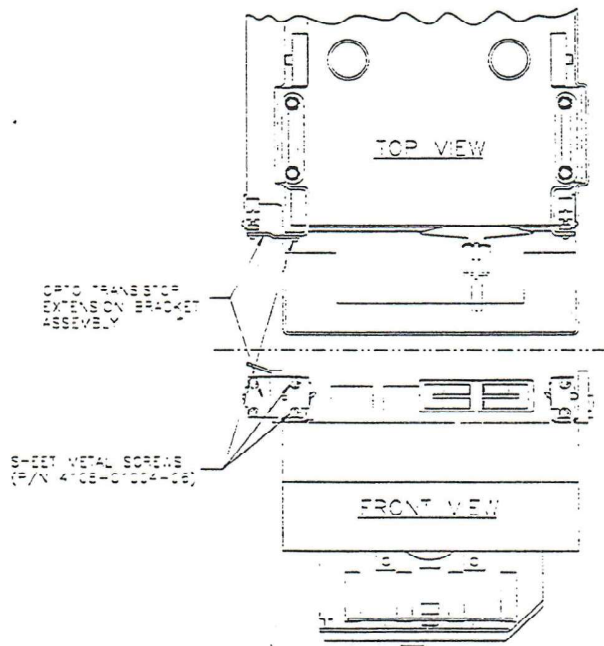


FIGURE 3